

ITM #	PART #	DESCRIPTION	QTY.
1	AF2072	Molded Intake Tube	1
2	AF1008	Oiled Air Filter	1
3	615005	Pre Filter Wrap	1
4	AF4076	Hump Rubber Coupler	1
5	AF4057	Hump Rubber Coupler	1

ITM #	PART #	DESCRIPTION	QTY.
N/A	PK994	Hardware Package includes:	1
6	AF4008	Rubber Grommet	1
7	MC175H	Hose Clamp	2
8	MC150H	#28 Hose Clamp	1
9	MC250H	#44 Hose Clamp	1
10	MC314H	#52 Hose Clamp	1
11	MC350H	#56 Hose Clamp	1
12	HW244	M6 x 1 x 16mm Screw	1

## OVERVIEW:



1. Please take a moment to read and understand these instructions before installing your XDR Air Intake performance kit.

**NOTE:** Please inventory all parts before starting the installation process and call our tech line to report any missing parts. This will help avoid potentially stranding your vehicle until any missing replacement parts arrive.

### WARNING:

For maximum safety, perform this installation on a clean, level surface with engine turned off.


### WARNING:

Avoid serious burns! Allow vehicle time to cool completely before handling any of the stock engine components.


## PREPARE VEHICLE FOR INSTALLATION:




2. Remove access panel from vehicle.

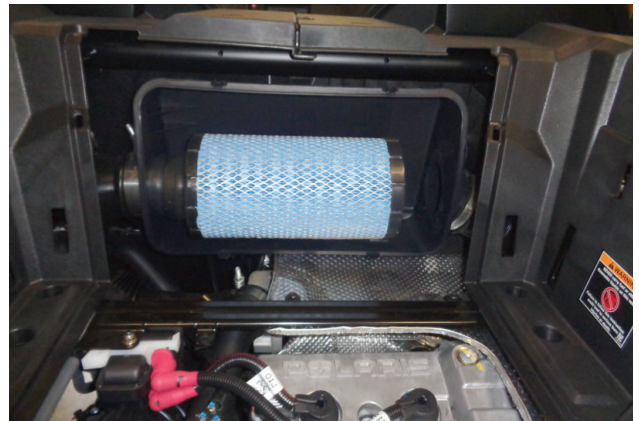

3. Unlatch and remove air filter cover from compartment, then remove air filter from vehicle.

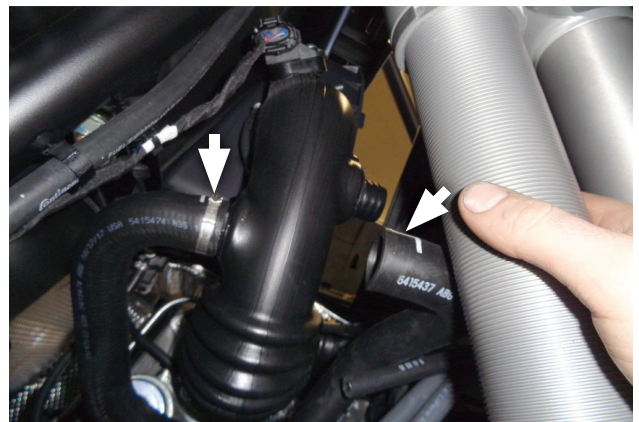

4. Remove (x2) clamps and factory hoses from intake tube.

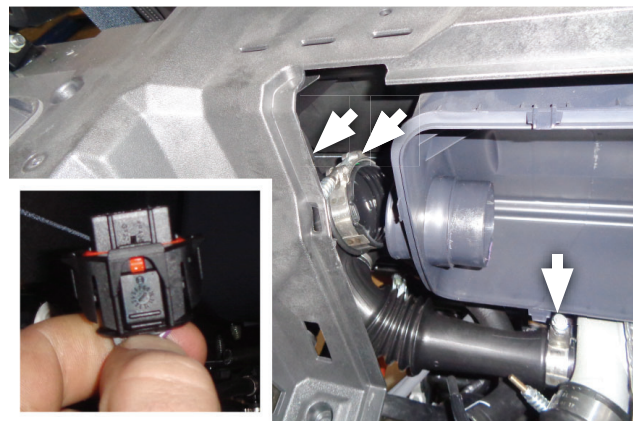


5. Unplug map sensor, loosen (x2) clamps then remove intake tube assembly from vehicle.




6. Remove and retain map sensor from factory intake tube as shown.


**INSTALL XDR PERFORMANCE AIR INTAKE:**

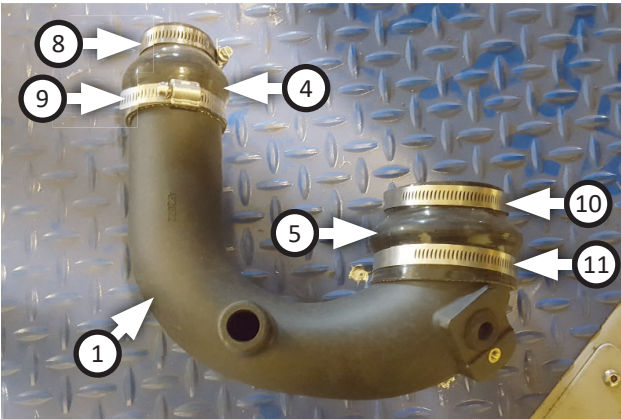


7. Set **hose clamps (8-11)** onto **hump couplers (4-5)** then place them onto **molded intake tube (1)** as shown.

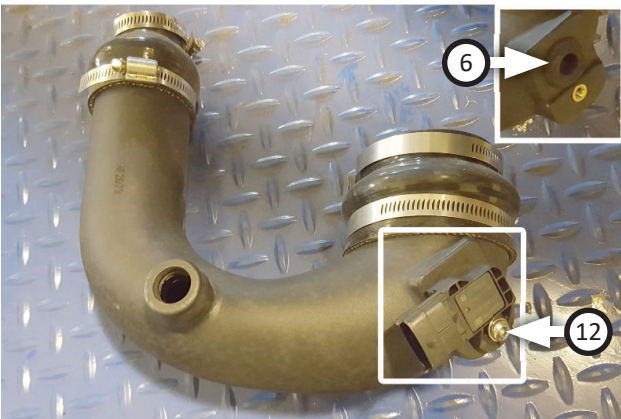


8. Install **rubber grommet (6)** into intake tube then fasten map sensor to molded intake tube using **screw (12)**.

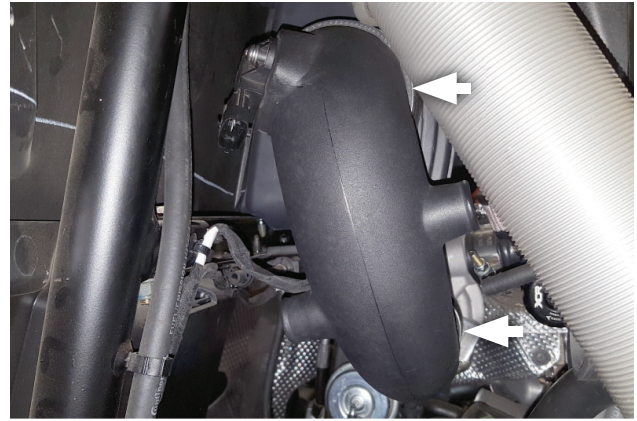

9. Fasten intake couplers to turbo and airbox, then center tube and tighten clamps.

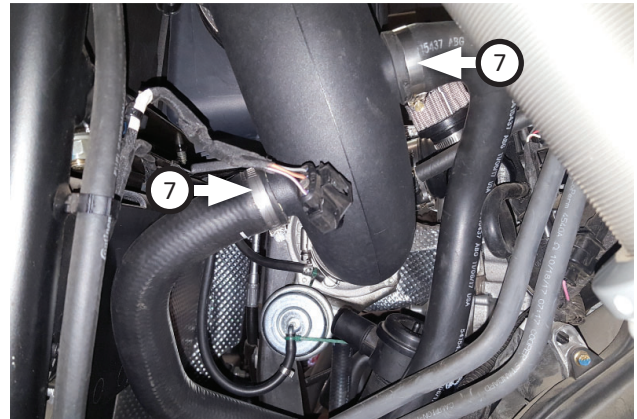

10. Install factory hoses onto molded intake tube using (x2) **hose clamps (7)** to secure connections.

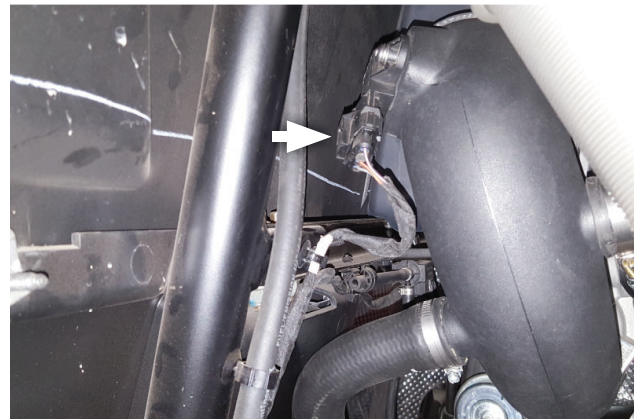

11. Reconnect map sensor as shown.



12. Fit pre filter wrap (3) over oiled air filter (2).



15. Replace access panel.



13. Install air filter assembly into airbox. Tighten clamps to secure it in place.



14. Inspect all installed components, securing connections and tightening all clamps to complete installation, then replace and latch air filter cover.

Congratulations, the installation of your XDR Performance Air Intake is now complete!

